

T9

User Manual

Detailed description available at
www.voicecaddie.com



VOICE CADDIE

What's In the Package

| T9



Power Button

Press and hold

Watch Mode
(Power ON/OFF)

Quick press

Golf Mode
(end the mode)

* The tiny hole at the top of the watch is not a reset button.

How to reset : Press and hold power button for 10 seconds to restart T9.
restart the watch.

| Charging Dock



How to Charge

- Connect provided charging dock to USB port.
- Connect T9 on the charging dock by aligning watch face with T9 text inside charging dock.

 
* If T9 is not correctly connected to charging dock, charging may not work properly.

| Strap (20mm)

Both a long strap and a short strap provided

Screen Description

| Shot & Putt Tracking

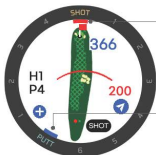


Shot Tracking

Recognizes and displays automatic/manual shots during a round

Putt Tracking

Recognizes and displays automatic/manual putts during a round

 e.g., After tee shot

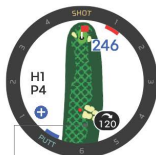

Driver distance will show once at ball location and before 2nd shot is taken.

e.g., 7 shots and 5 putts



Red dashes show shot count.
Blue dashes show putt count.

Screen Description

| How to change watch face



- Press and hold on the watch face to enter the watch face setting screen
- Change watch face by sliding to left and right
- Touch the dot at the top of the screen to change color
- When setting is complete, touch the ✓ at the bottom of the screen

Time / Date Settings

| Automatic setting _ outdoor only



When Golf Mode is selected
Time is automatically set after
GPS signal is received

| Manual setting _ indoor/outdoor possible

- On the Menu screen, touch  > Time



Touch **Current Time** in
the list to enter, then swipe
up and down to set the time

- On the Menu screen, touch  > Time



Touch **Date** in the list
to enter, then swipe up and
down to set the date

General Settings

| Set User Info

- On the Menu screen, touch  > User info.



Swipe up and down to set correct user info.
Select ✓ when done editing.

| Change Language

- On the Menu screen, touch  > Language



Swipe up and down to set language desired.

| Notification Settings

- On the Menu screen, touch  > Notification



Select **Vibration** or **Preview** to editing settings.

Golf Options

| Change Unit of Measurement

- On the Menu screen, touch  > Golf option > Unit Change



Swipe up and down to set correct unit of measurement

| Scoring settings

- On the Menu screen, touch  > Golf option > Scoring



Simple Mode
Automatically tracks score throughout round

Advanced Mode
Prompt to manually set strokes and putts will appear after each hole.

| Slope Compensation Settings

- On the Menu screen, touch  > Golf option > Dist. Measurement



Adj. Slope Dist.
Distance provided will include slope adjustments

Tournament
Distance provided will not include slope adjustments

Golf Options (Cont.)

| Driver Distance Setting

- On the Menu screen, touch  > Golf option > Driver Dist.



Swipe up or down to set your normal driver distance.

Select ✓ when done editing.

Driver Arc will appear on course preview when available.

| Night Mode

- On the Menu screen, touch  > Golf option > Night Mode




Night mode will keep back light on during entire round until you exit golf mode

| What is V.AI™?

An AI-based golf service that automatically provides necessary information by detecting the golfer's location and situation so that the golfer can focus on his or her swing during a round.

e.g.,

 - ① teeing area, entering fairway after tee shot, entering green attack area, on green

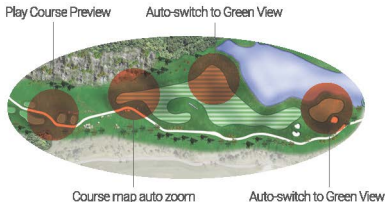

- ② Shot Feedback View : detects a shot and displays distance and tempo
- ③ Shot & Putt Tracking : automatically detects and displays shots & putts

* How to deactivate V. AI

Menu > Settings > Golf Setting > V. AI > OFF



Shot Feedback View

- **Shot Tempo** : Automatically provides the swing tempo of the shot immediately after shot is taken



Automatically provides backswing, downswing, and tempo by detecting the golfer's swing

- **Golf ball distance** : When the icon is touched, the distance and tempo of the previous shot are shown.



Touch the **SHOT** icon or the distance number icon to see distance and shot tempo

* When the  icon is touched, the distance is measured manually and the number of shot is added.

Enter Golf Mode

Golf Mode

When the Golf Mode icon is touched, T9 will search for current course GPS and automatically detect starting hole.



Switch to the 'Course View /Green View/Yardage View' screen

| To enter Green View/Putt View/Yardage View

Swipe the 'Course View' screen when running Golf Mode for the first time.



- Course View, Green View, Putt View images may vary with regions and golf course situations.

* 'Yardage View' displays key data in large numbers when the + button icon is tapped




Course Preview

| Course Preview at the teeing area

- If you touch the 'Course Preview' icon , the device will play 'Course Preview'.
- It shows the distance to a bunker close to where the tee shot lands

Once the playback is finished, the screen returns to Golf Mode

* If the screen is touched during playback, it immediately returns to Golf Mode

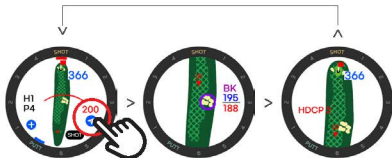


HDCCP / IP / Driver Distance
It shows information on
bunkers and hazards

It shows distance
to the pin



Indication of Bunkers/Hazards

When the relevant bunker or hazard is touched, the distance to the front and back of the bunker/hazard is displayed.

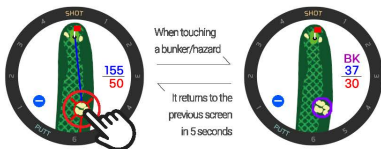

* Touch on the enlarged screen is easier.



Green View

Real Green Undulation

It indicates in 11 stages, using the actual measured green undulation data

Green Zoom (2-stage)

When the  icon is touched, the green is expanded ('Pin Reload' is supported)



Real Green Undulation

Touch the icon



Green Zoom

Green Zoom (2-stage)

- Touch the icon once (Stage 1) / twice (Stage 2)



Active Green View

| The shape of the green automatically rotates as the golfer's location changes





Putt View

It shows the height and distance from the ball to the pin



When standing next to ball location, tap ball icon (●) to show remaining distance and slope to pin.


- ① Move to where the ball lies and touches the ball icon (●).
 - ② Return to where the pin lies and touch the pin icon (●), and height and distance are provided.
- Zoom in or out with the +/- tap. You can toggle between screens by dragging on the expanded screen

Tempo Practice Mode

| What is tempo practice mode?

A mode that provides practice in timing the tempo by setting a target tempo, so that you can practice for a consistent swing.

- On the menu screen, touch  >
Choose from [Full Swing/Approach/Putt]

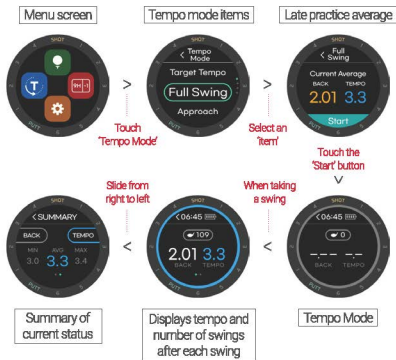

Tempo Practice Mode

2 ways to set target tempo

- Amidst the Tempo Mode items, touch [Target Tempo] > Choose from among [Full Swing/Approach/Putt]



- Touch and hold the center of the screen in Tempo Mode



- When setting the Target Tempo, the target speed is displayed as a color circle.
Fast (Red), Accurate (Blue), Slow (Yellow)

How to Download My Voice Caddie



QR code to go to
My Voice Caddie App download



Android



iOS

1. Search **[My Voice Caddie]** in the App search screen
2. Download and execute the App
3. When executing the app, log in for the first time or sign up for membership
4. Touch **Connect** on the home screen
5. After activating Bluetooth on the device, enter the security number displayed on the device into the App to connect

App Connection

| Bluetooth Activation



- ① Swipe down the watch face



- ② Touch 'Connect' to activate Bluetooth



- ③ Check the identification number of T9



- ④ After checking the security number displayed on the device when connecting to the app, enter it into the App

* An Interworked App brings features including phone, text message, Social media reception, Tempo Practice Mode, quick GPS, score management, updated golf course information, and firmware download

Product Specifications

Product	Voice Caddie T9
Key Features	V-algorithm TM, Course Preview, Real green Undulation, 2-Step Green Zoom, Putt View, Shot & Putt Tracking, Tempo Practice Mode, My Voice Caddie app
Size/Weight	Main unit : 45mm x 45mm x 14.8mm / 31.3g Charging Dock : 47.5mm x 47.5mm x 14.4mm
Supported Courses	All golf courses around the world (except some / about 800 courses in Korea)
Supported Languages	Korean, English, Japanese, Chinese
Margin of Error	±3m
Included in the Package	Main unit, USB cable, User Manual

Precautions

- The time it takes to find a satellite in Golf Mode may vary depending on the reception (as affected by weather and terrain).
Please turn on Golf Mode outdoors (Start Square, etc.).
- The battery life may be shortened when used in areas with poor satellite reception or in cold weather.
- Leaving the device in a high-temperature place such as a vehicle in summer or a high-humidity place such as a golf bag may cause malfunction.
- If you take a shower or enter the bathroom while wearing the watch, it may cause malfunction.

Caution

This equipment has been tested and found to comply with The limits for a Class B digital device, pursuant to part 15 of the FEE Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Caution

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio / TV technician for help.
 - This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation.
 - Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
 - The device has been evaluated to meet general RF exposure requirement.
 - The device can be used in portable exposure condition without restriction.
- * Risk of explosion if battery is replaced by an incorrect type.
Dispose of used batteries according to the instructions.

Warranty

1. This product has been produced through strict quality control and thorough inspection. In accordance with the Consumer Damage Compensation Regulations announced by the Ministry of Finance and Economy, we will properly compensate consumers for damage.
2. You can receive free service in case of a malfunction that occurs under normal use within the warranty period.
3. When requesting after-sales service and damage compensation, be sure to present this warranty and proof of purchase (receipt).

Pro Tips

| Use pro tips below to get the most out of your T9

- Be sure to setup your Golf Options like driver distance under settings tab.
- Keep your T9 updated with the newest firmware and course info using our VC Manager
Download at voicecaddie.com
- After finishing your round, be sure to exit golf mode and turn off T9 to prolong battery life.

Technical Questions?

| Let us know by calling us at

1-888-939-3978

| Email us at

support@voicecaddie.com

Warranty

Product	VOICE CADDIE T9
Serial number	
Date of purchase	
Vendor	
Vendor Phone	
Buyer's name and phone	
Warrenty	1 year after purchase (however, 6 months for battery and other components)
Replacement and refund period	within 14 days of product purchase in unused condition

Battery Duration

- Average duration in Watch Mode: about 9 to 10 days
- Average duration in Golf Mode: about 27 holes of play

* Battery life may vary depending on usage and environmental factors.

* 한국어 매뉴얼은 <https://voicecaddie.com/manual-download/>에서 다운로드 가능합니다.



Call : 562-926-3978
6940 Aragon Cir. Unit 6 Buena Park, CA 90620