 
 


# PT-30 User Manual

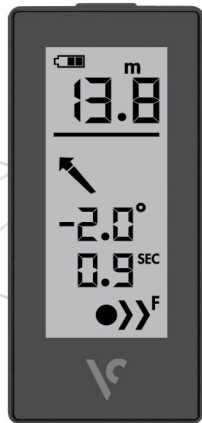


## Components and Installation

### ① Components




### ② Installation

- Place the shaft ring around the bottom of the putter's shaft (toward the head).
- Slide the ring upwards (toward the grip) until it is firmly fixed around the shaft.

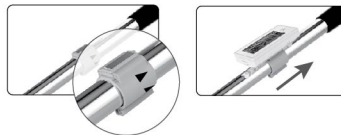

### ③ Replacing the Battery

- Squeeze and remove the battery case.
- Insert a new coin cell battery and reinsert the battery case.
- \* The text on the coin cell battery should be facing the back of the product.

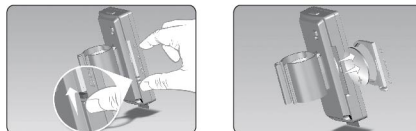


## Features

### Name of Components



## Basic Usage

### ▶ Illustration 1

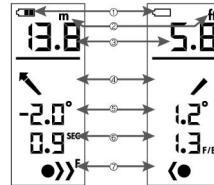

### ▶ Illustration 2

 


	Illustration 1	Illustration 2
①	Remaining battery: 66%	Low battery: 0%
②	M (meter) selection	Ft (feet) selection
③	Distance: 13.8m	Distance: 5.8ft
④	Ball direction by club angle Putting stroke: pushed and hit	Putting stroke: cut and hit
⑤	Head 2.0 degrees closed at time of impact	Head 1.2 degrees open at time of impact
⑥	Putting total time: 0.9 second	1.3 : 1 F/B (Ratio of forward / back swings)
⑦	Green speed: very fast	Green speed: slow

### ① Turning Power On/Off

- The ON/OFF power button is located at the back of the product.

### ② Sleep Mode (reducing battery consumption)

- The PT30 will power off its LCD screen and switch to sleep mode when removed from the putter for more than 10 seconds. It will also switch to sleep mode when there is no button operation or motion for 30 seconds.
- When reattached to the putter and/or when in use, the screen will power on and release sleep mode.

### ③ Set Up

- Meter/Feet Selection: Press and hold the main button (2 seconds)
- Tempo Display Selection: Press and hold the main button (4 seconds)
- \* SEC: Seconds
- \* F/B: Ratio of forward and back swings

### ④ Green Speed Selection

- Press the main button to adjust green speed.
- normal - fast - faster - fastest - slow - slower - slowest
- ●● ●●● ●●●● ◀● ◀●● ◀●●●

## Product Specifications

Hardware Specs	Sensor	6-Axis Sensor (3-Axis Accelerometer & 3-Axis Gyroscope Sensor)
	Dimensions	Body: 55 mm x 26 mm x 11 mm (2.2" x 1.0" x 0.43") Shaft Ring Large: 20 mm x Ø13.2 mm (0.79" x Ø0.52") Shaft Ring Small: 20 mm x Ø12.3 mm (0.79" x Ø0.48")
	Weight	Body (battery included): 16 g (0.56 oz) Shaft Ring: 4 g (0.14 oz)
	Color	Black
	Interface	Tact Switch, Magnetic Sensor
	Operating Temperature	10° - 50°C (32° - 122°F)
	Battery Life	Practice Mode: approx. 4000 games Round Mode: approx. 15 games
	Battery	Coin Battery (CR2016) 90mAh

## Important Tips

- For proper measurement, please ensure that you have set up square at address.
- The measured distance may differ from the actual distance due to green speed and/or incorrect swing path or impact.

### Terms and Conditions:

Voice Caddie warrants its product against defects in materials and workmanship for a period of one year from the date of original retail purchase. If a defect exists, at its discretion Voice Caddie will: (1) repair the product at no charge; (2) exchange the product with a product that is functionally equivalent to the original product. Voice Caddie shall have no obligation to repair, or replace until the product is received and evaluated by Voice Caddie. This warranty does not apply: (1) to damage caused by accident, abuse, misuse, misapplication, or damage caused by non-Voice Caddie product or peripherals; (2) to damage caused by service performed by anyone who is not a Voice Caddie Authorized Service Provider; or (3) to a product or part that has been modified without the written permission of Voice Caddie.

### Warranty Procedures:

Email us at [rma@voicercaddie.com](mailto:rma@voicercaddie.com) to receive a return merchandise authorization (RMA) number prior to returning any merchandise. A copy of the original purchase receipt is required to verify the date of purchase. If a return is approved, please send the unit along with a copy of the original purchase receipt and the RMA number marked clearly on the outside of the package. Shipping fees accrued for returns are responsibility of the sender.

Product Name	Putting Caddie	Warranty Period
Model Name	PT-30	1 year after the date of purchase (Excludes battery and other components)
Purchase Date		
Purchaser's Address		
Full Name		Telephone